


# Western BUILDING SUPPLY

## Installation Guide

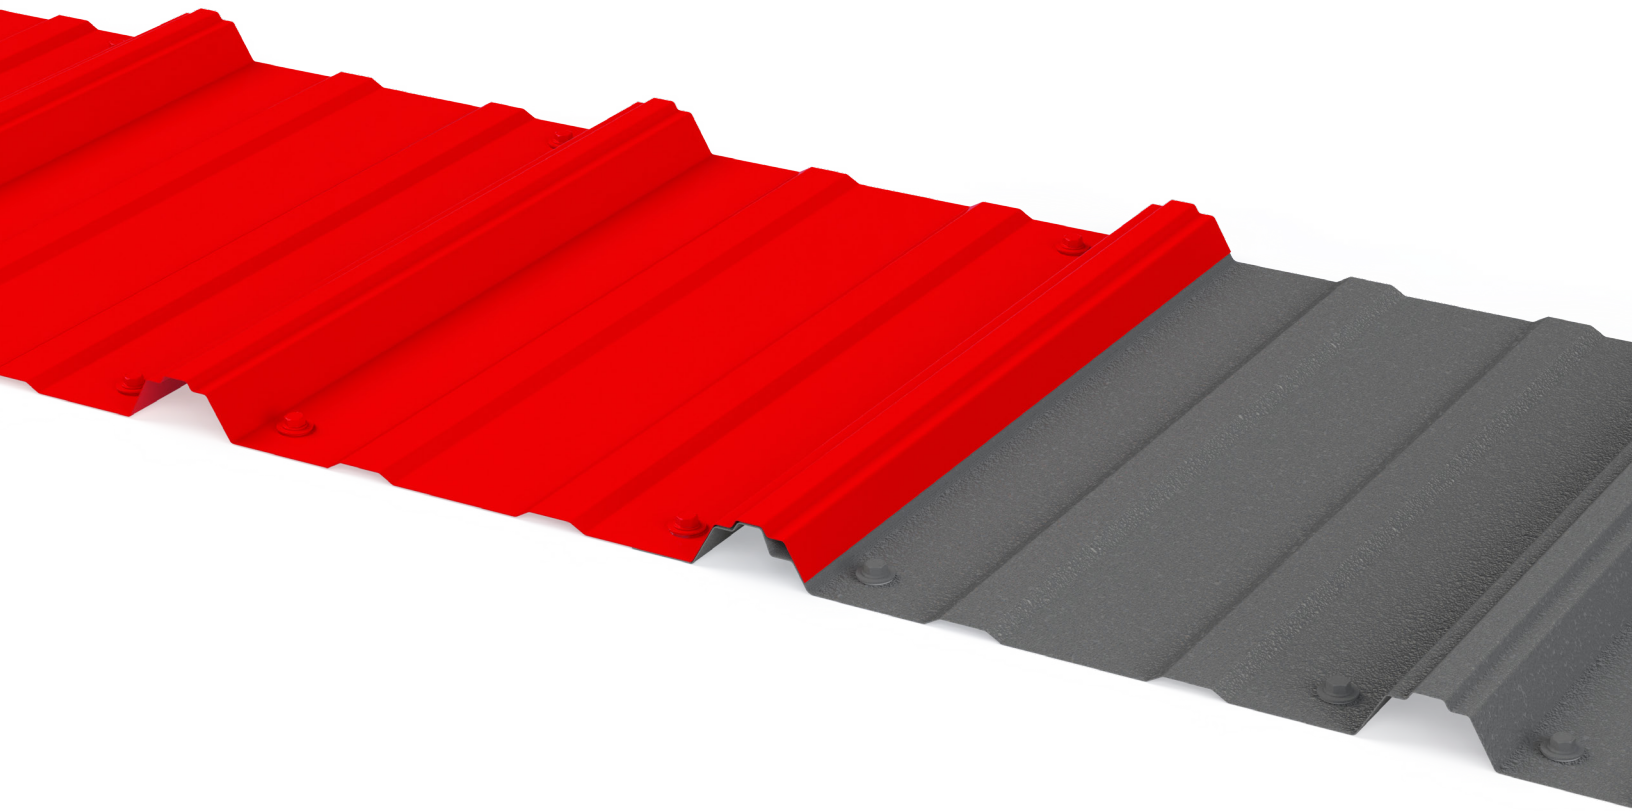

### FASTENER SEAL



**CORRECT:** Sealing material slightly visible at edge of metal washer. Assembly is weathertight.




**TOO LOOSE:** Sealing material not visible. Not enough compression to seal properly.




**TOO TIGHT:** Sealing material extruded beyond edge of washer.

# Western BUILDING SUPPLY

307.322.2888  
www.westernbuildingsupplyllc.com  
sales@wbswyo.com





Field Screw Pattern

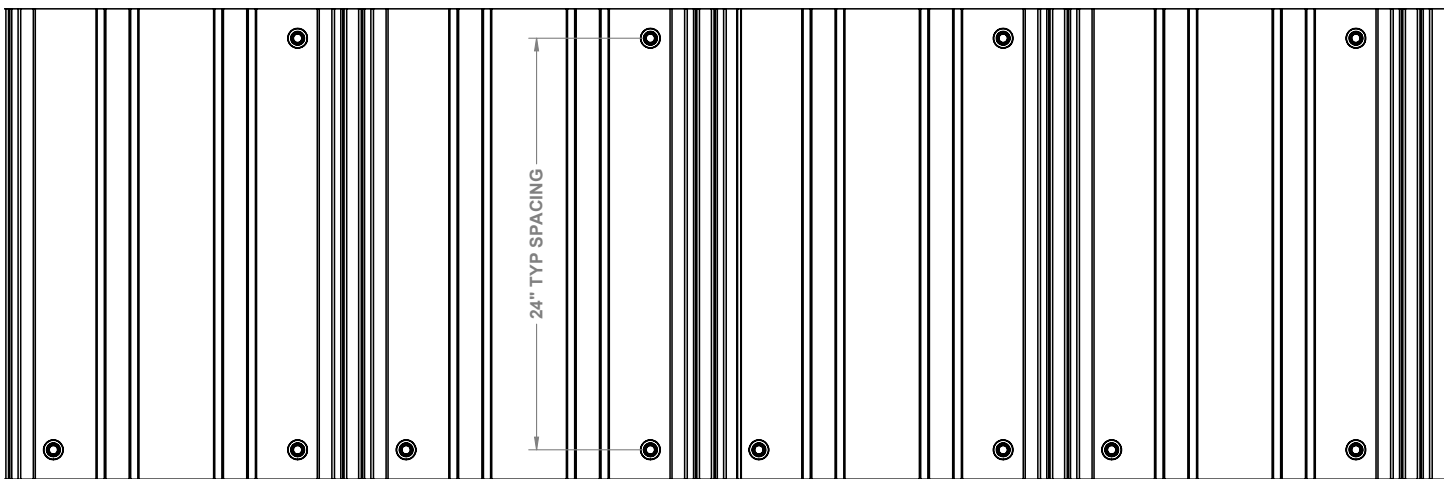

Prevailing Wind →

Eave Screw Pattern

← Install Direction

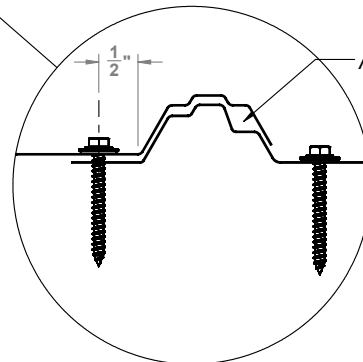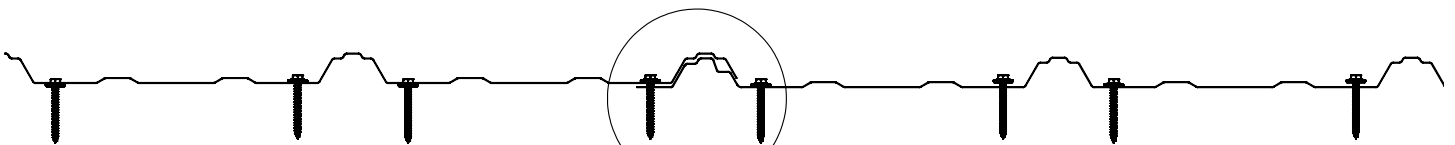

ANTI-SIPHON CHANNEL